

Single Wire **HOOK LOCK**^{*} Installation Guide



1 Insert key into keyway on bottom of lock. Turn the key clockwise (to the right) to release the plunger and remove the key.



2 To open, rotate the right side of hinged portion of lock upward.



3 Place lock over wire hook to be protected.



4 Rotate the hinged portion of lock downwards to clamp onto wire hook.



5 While holding hinged portion of lock in place push the plunger back into the lock body.



6 Single Wire Hook Lock is now installed. Check the lock to make sure it does not slide off hook.

TO REMOVE SINGLE WIRE HOOK LOCK FROM WIRE HOOK.
Insert key into lock, turn the key clockwise to release the plunger and then remove key. Open the hinged part of lock and remove from wire hook.

Patent #: US 10,156,088; US D899,218