

## KRC-US CORE INSTALLATION INSTRUCTIONS


### \*\* IMPORTANT NOTE \*\*

Before installing the core always have the door / drawer open so there is full access to the lock.

#### Step 1:

Insert CONTROL KEY into the lock.


\*Note the retention tab protruding from the core cylinder.

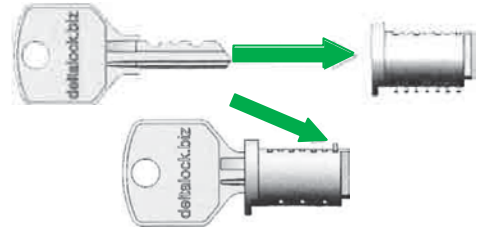

#### Step 2:


Look inside the lock barrel. The wide slot will line up parallel to the guide groove in the ready position.

If the inner wide slot is not in the right position use a flat head screwdriver to line it up.

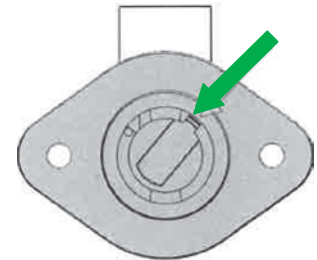


#### Step 3:

Line up the retention tab on the core with the guide groove in the lock housing and insert the core. (the core should seat completely and be flush with the flange edge).

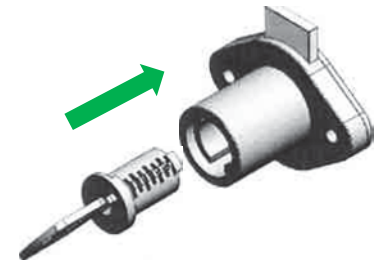

#### Step 4:

Turn the key to the 12 o'clock position remove the control key. Test operation with an operating key. Check that the core is fully seated by lightly pulling on the key while turning.

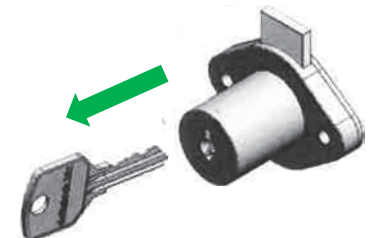

### To Remove the Core:

Insert the Control Key into the core.  
Turn 45° and pull out the core.

For additional assistance **Just Ask!**

Delta Lock (631) 238 – 7035 or [customerservice@deltalock.biz](mailto:customerservice@deltalock.biz)

366 Central Ave., Bohemia, NY 11716 \* [www.deltalock.biz](http://www.deltalock.biz)